


IMPORTANT NOTICE

**The first time you Power On your SunBriteTV Model 3210HD TV,
the following options may appear for your selection:**

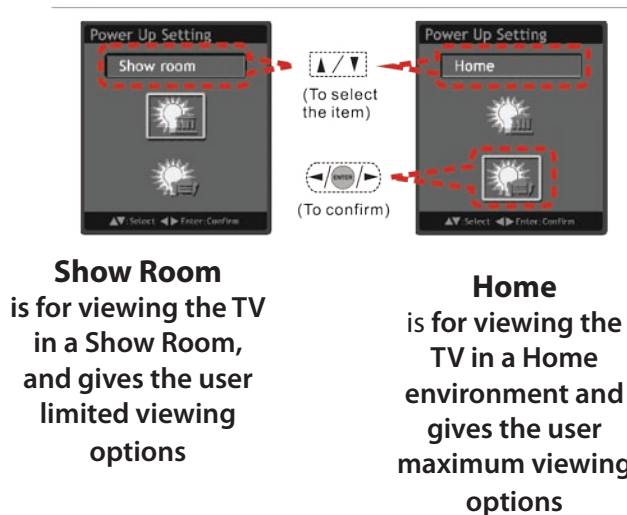

**To achieve maximum viewing and setting options,
be sure to change the setting to
“HOME”**

NOTE:

**If you are having trouble with AutoScan function, or selecting other
menu options, check to be sure the Power Up setting is set to
“HOME”**

Menu ► Picture ► Mode ► Power Up ►

Select Home ►

Press Enter ► Menu Out